

Untitled1: Programming Barcodes for LS3408

Configuration name in Utility : Untitled1
Version : 001
Last Modified : 31-Dec-14
Windows Filename : LS3408_OASIS.scncfg
Plug-in Name : LS3408-COMMON FZ MODELS-013



Instructions: Scan barcodes in order, starting with programming barcode 1.

 
1/7. Set Factory Defaults



Cable Connection Settings

USB

2/7. USB Device Type Default (HID Keyboard Emulation)



IBM Wedge

3/7. Terminal Type IBM AT Notebook



Modify Data

4/7. Erase All Rules



5/7. Begin New Rule,1. Send All that remains,2. Send Extended Key <Tab>



6/7. Save Rule



Untitled1: Programming Barcodes for LS3408

Configuration name in Utility : Untitled1
Version : 001
Last Modified : 31-Dec-14
Windows Filename : LS3408_OASIS.scncfg
Plug-in Name : LS3408-COMMON FZ MODELS-013



General Parameter Settings

7/7. Configuration File Untitled1



Firmware:

NBRNICAJ

Supported Scanner Models for Plug-in :

LS3408-FZ20005

LS3408-FZ20005R

LS3408-FZ20095R

LS3408-FZ20115R

LS3408-FZ20135R

LS3408-FZ20145R

LS3408-FZ20005Y